Metal Walk-in
Chicken Coop Run

Instruction manual
For specification: 2m(L) x 3m(W) x 2m(H)



Please read this manual carefully before assembly



1 x4pcs 1410mm pipe



2 x5pcs 1870mm pipe



3 x4pcs 970mm pipe



4 x4pcs 1480mm pipe




5 x2pcs 440mm pipe



6 x1pcs 530mm pipe




D1 x1pcs



D2 x1pcs




D3 x1pcs




A x6pcs




C x4pcs



E x2pcs



F 24mx1



H x2pcs




I x3pcs



J x1pcs Roof



K x4pcs



L x4pcs



M x6pcs




N xNpcs




O xNpcs

Step 1


Assemble the bottom frame as the below drawing.

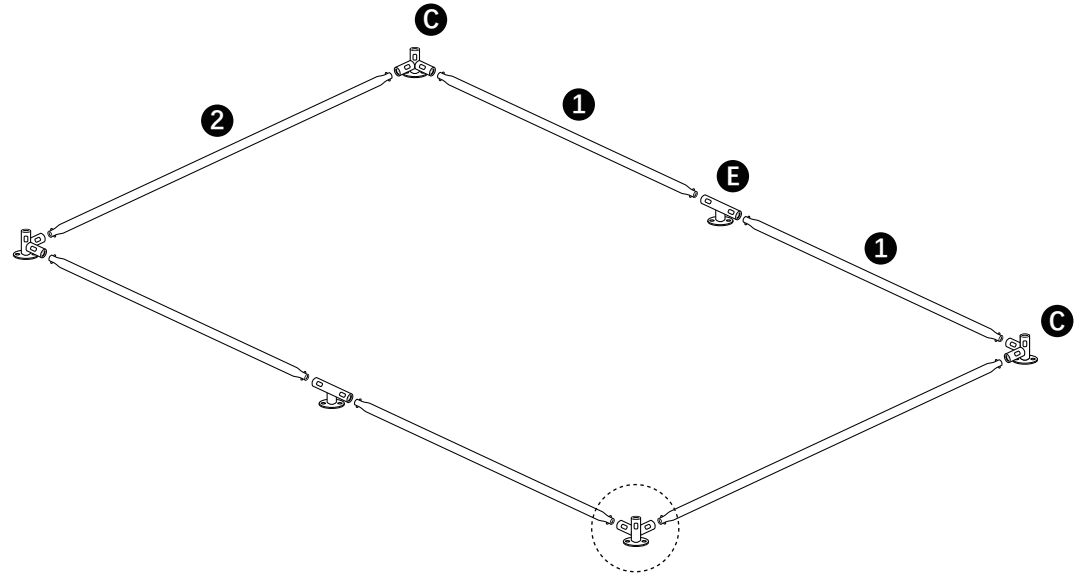


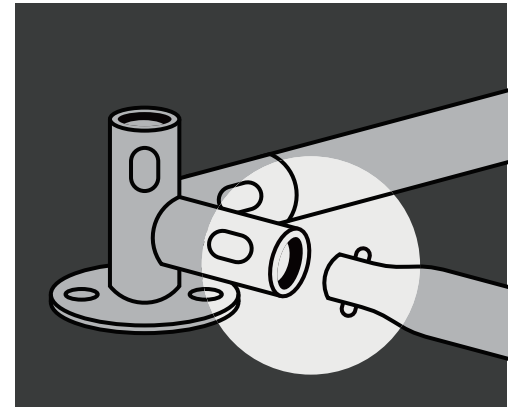

Step 2

Gather pipe “3”×4pcs, insert the pipes into the connectors “C” as the below drawing.

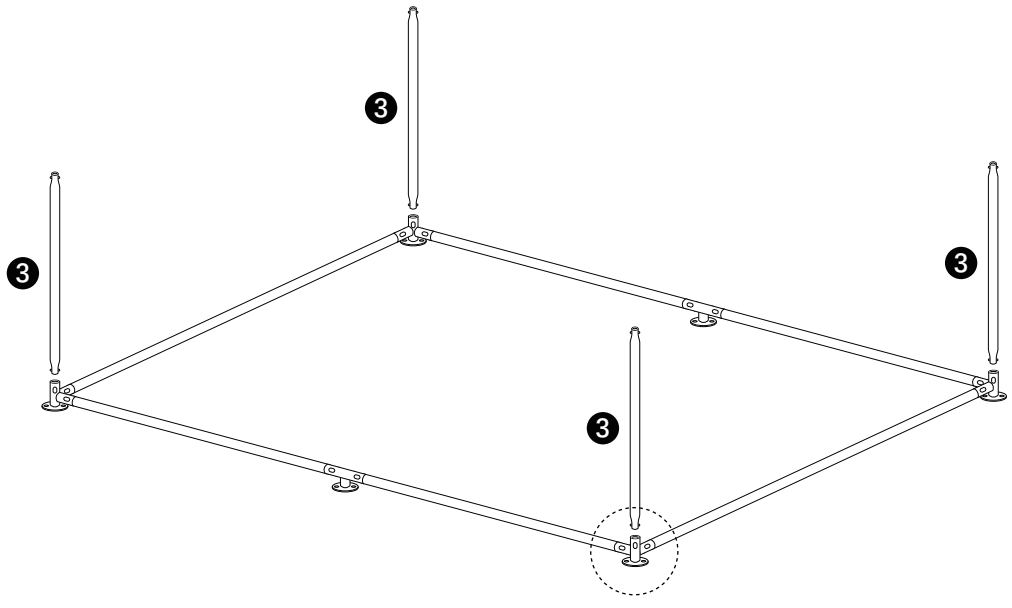


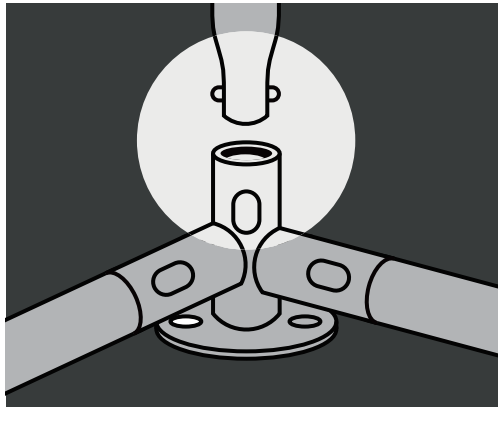


Chicken Coop Run Assembly Process

Step 3


Gather connector “A”×4pcs, and pipe “2”×2pcs, assemble as the below drawing.

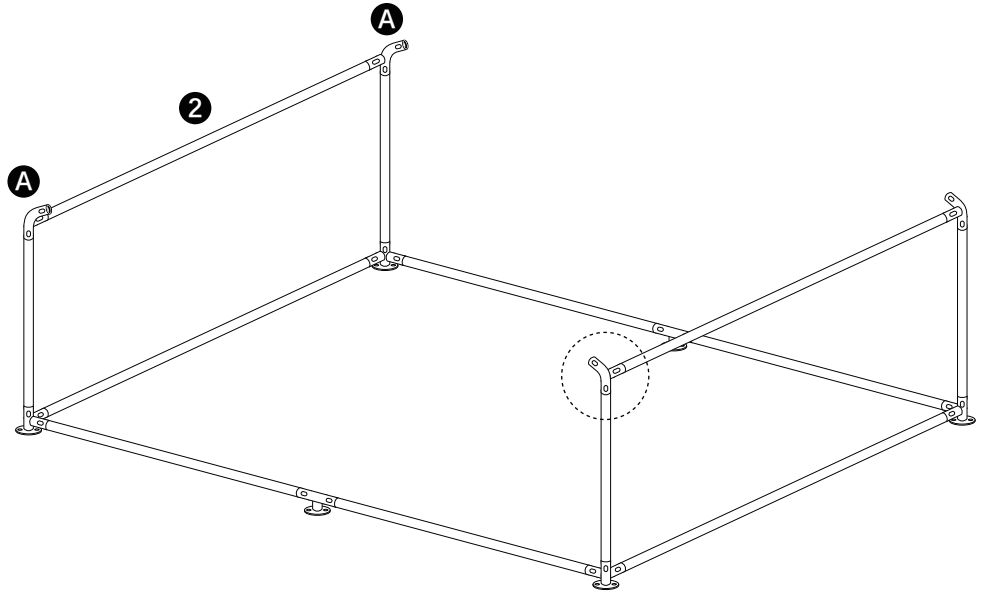


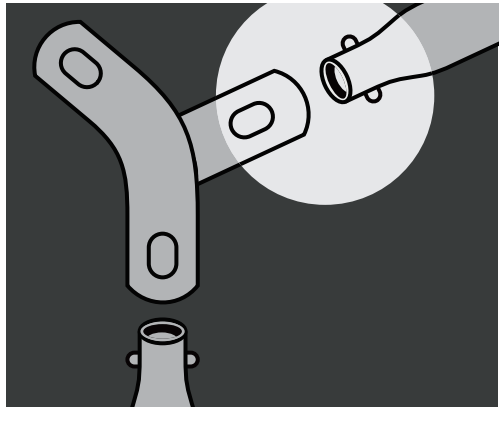

Step 4

Gather connector “A”×2pcs. Pipe “4”×4pcs and “2”×1pcs
Assemble the top frame as the drawing.

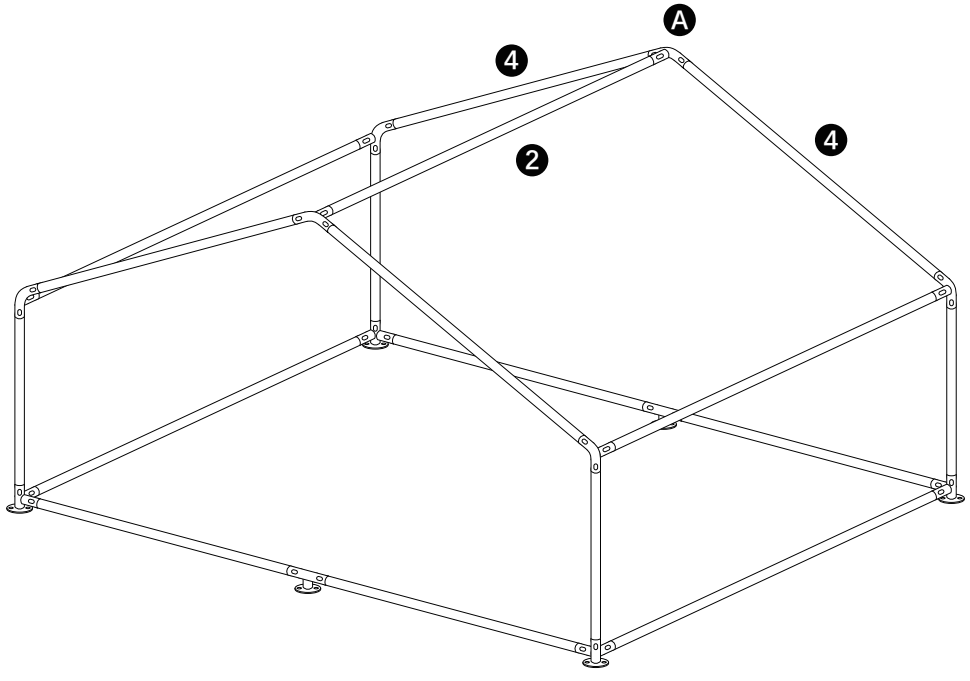


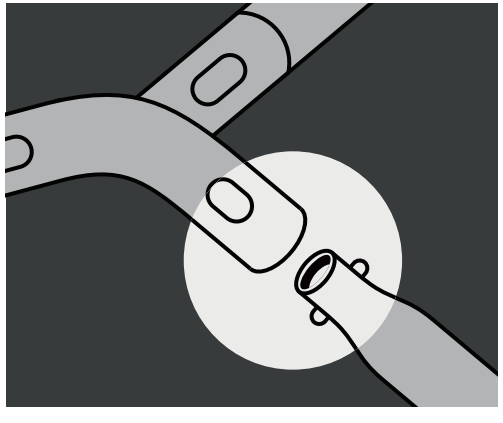


Chicken Coop Run Assembly Process

Step 5


Assemble the door with 1 pcs of “D1”, 1pcs of “D2”, 1 pcs of “D3”,
2 pcs of “5” and 1 pcs of “6”.

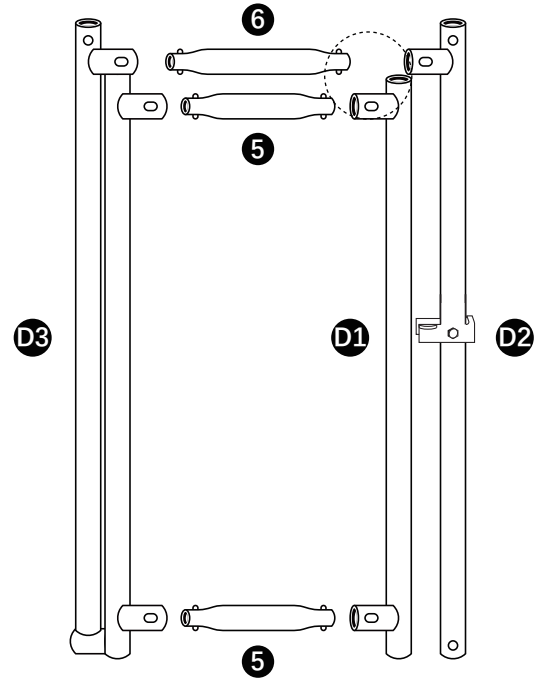


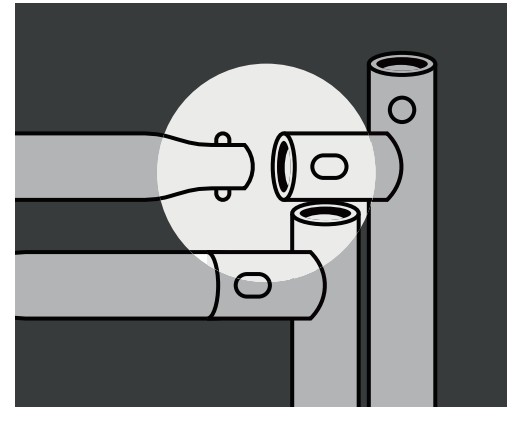


Step 6

Install the door to the chicken frame with “H”x2 pcs, “I”x3pcs and screws.

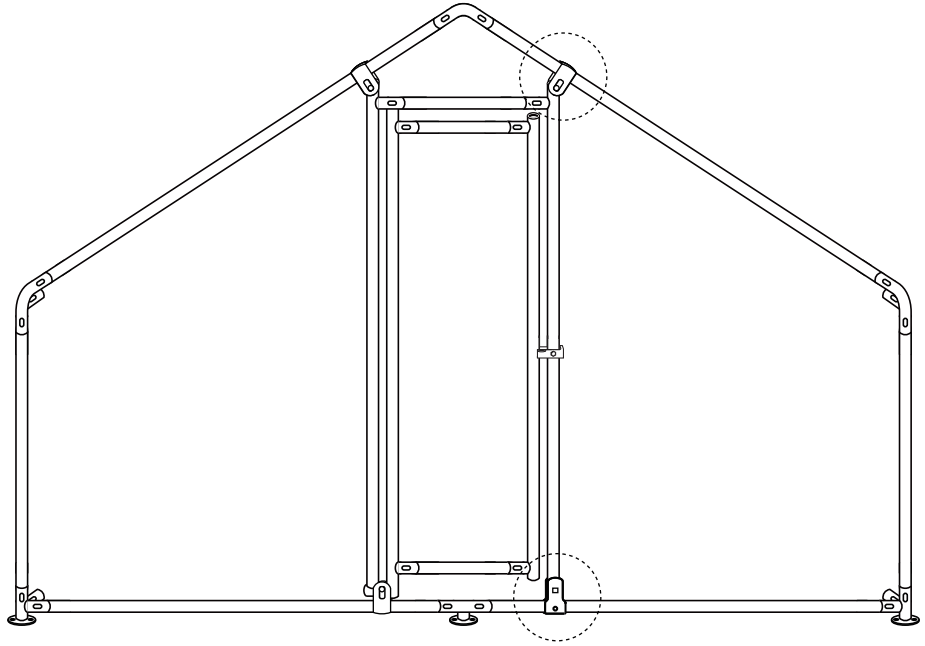

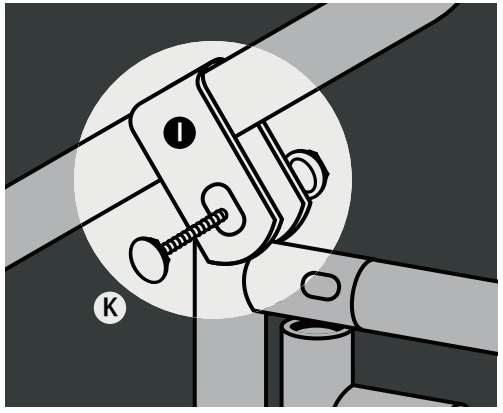


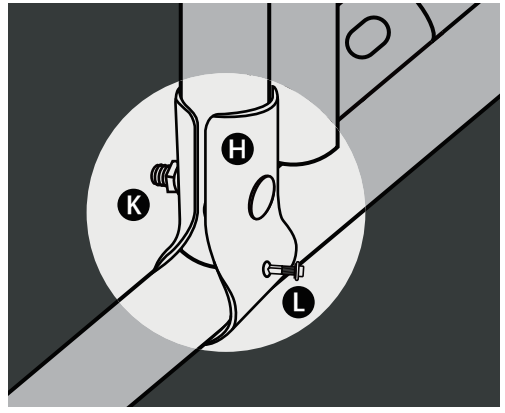



Chicken Coop Run Assembly Process

Step 7

Step 1: NO PRE-CUT! Cover around the house, then cut off finally. And tie it to the pipes with strap “N”.

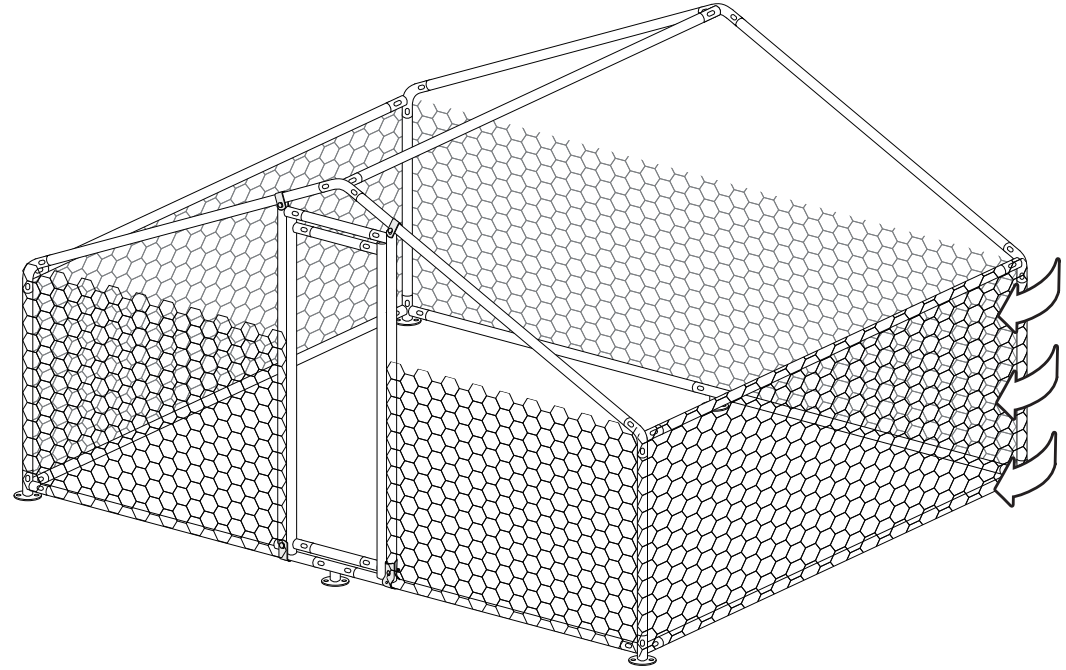


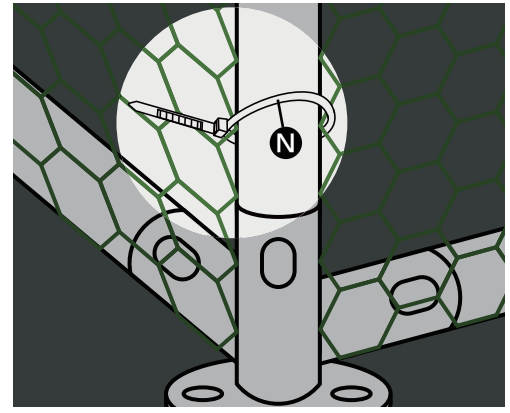

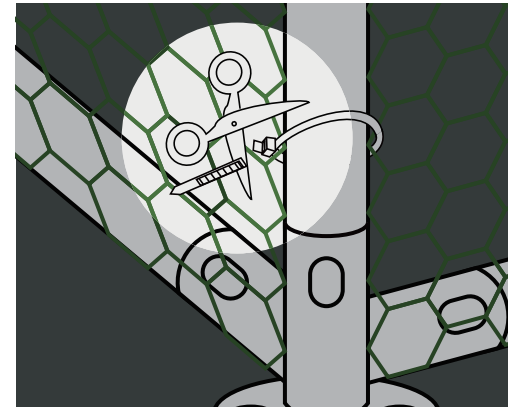


Step 8

NO PRE-CUT! Cover the top, finally cut off. And tie it to the pipes with strap “N”.

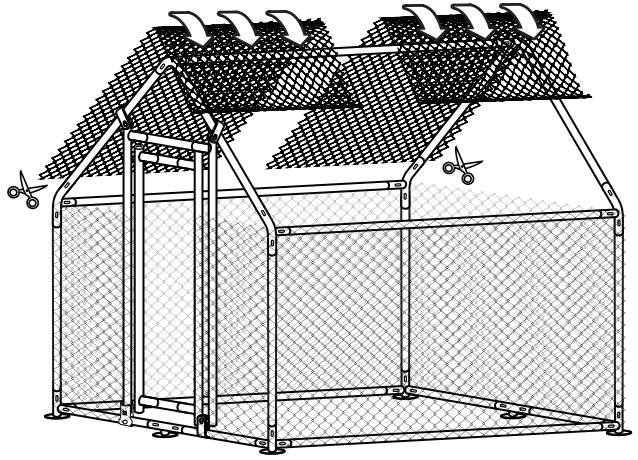


Step 9

Measure the △parts of front and back sides, Pre-cut the wire mesh for covering . And tie it to the pipes with strap “N”.

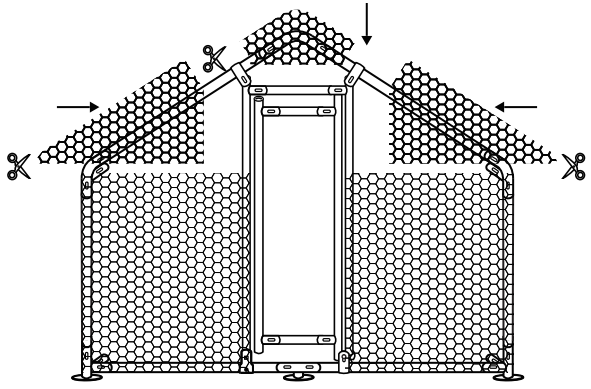

(Front)

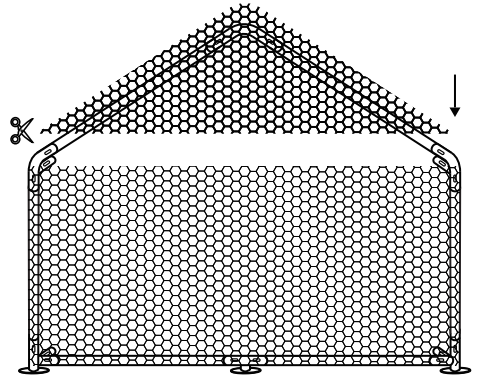


(Back)

Chicken Coop Run Assembly Process


Step 10


Measure the door size, Pre-cut the wire mesh for covering . And tie it to the pipes with strap “N”.

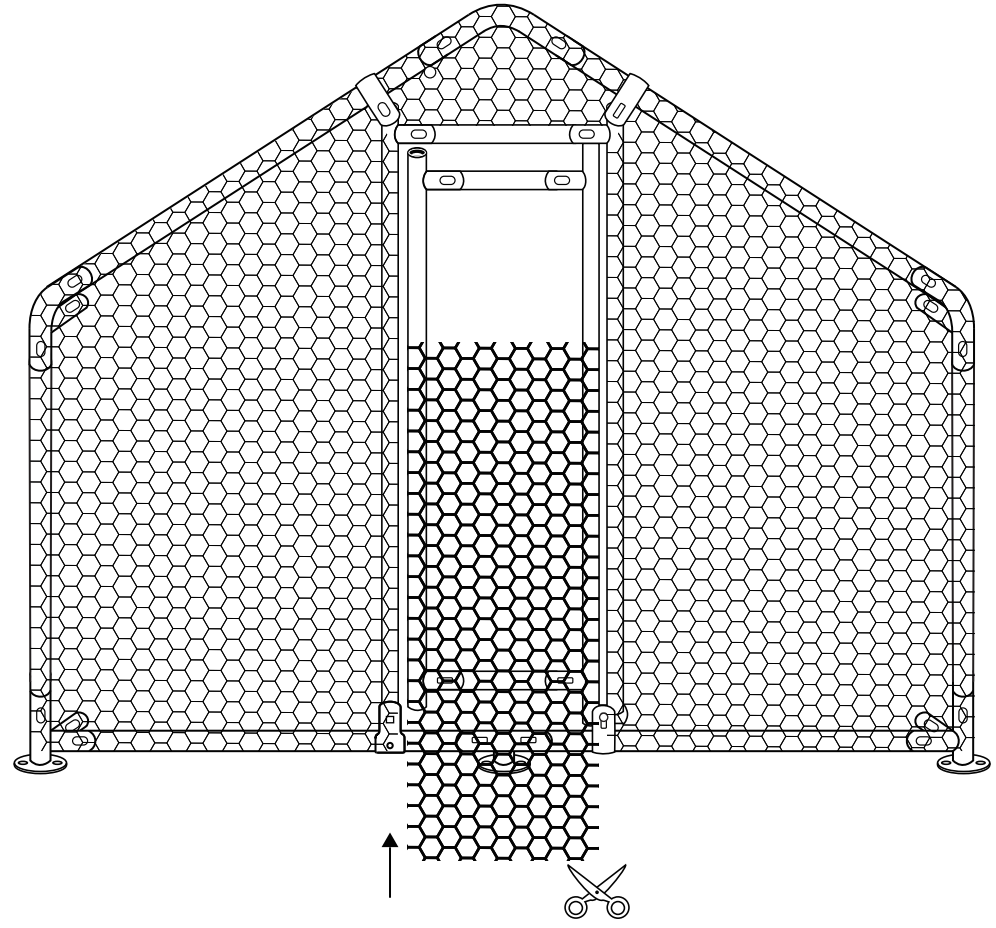

Step 11

Put the waterproof cover “J” on the frame, tighten it on the frame with “O”.

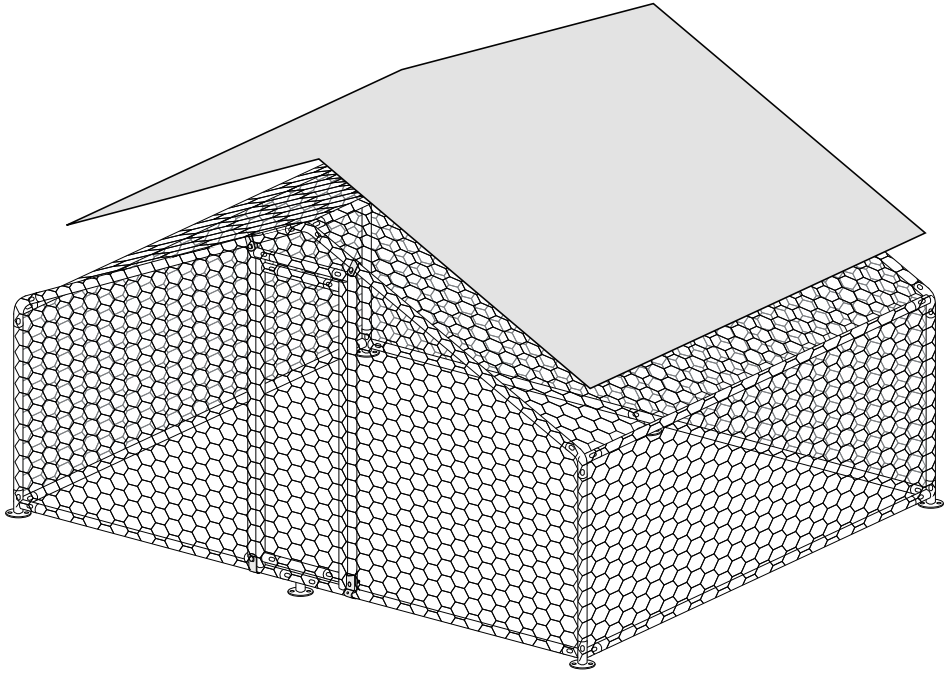

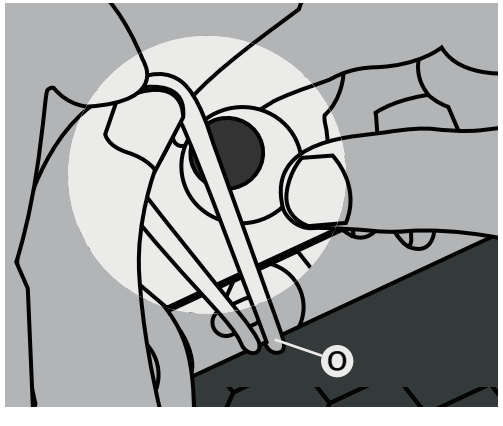

Chicken Coop Run Assembly Process

Step 12

Put the ground anchor “M” into ground to make the cage more stable and durable.

